
## SERVICE-INFO INSTRUCTIONS FOR INSTALLATION SMART BRAKE LIGHT SWITCH



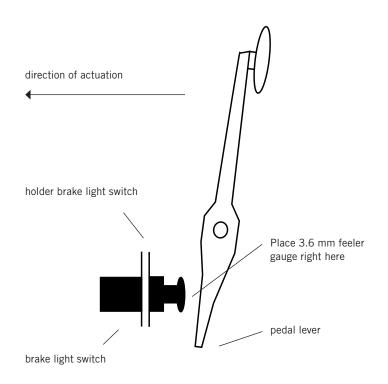

Brake lights must flash up at latest after 12 mm.

## **NUMBER:**

V30-73-0136

## **ATTENTION!**

The plunger of the brake light switch has to be adjusted correctly!

- Enlarge the space between brake pedal and the holder of the brake light switch by pressing the brake pedal.
- Place a feeler gauge (3.6 mm thick) between brake pedal and switch. Pull the plunger out of the brake light switch completely and install the switch with placed feeler gauge. Release the brake pedal slowly so that the plunger of the brake light switch adjusts itself automatically.
- Remove the feeler gauge.
- Check the adjustment by putting a tape measure between brake pedal and steering wheel. The distance between released and activated brake pedal (until the brake lights illuminate) has to be 7 -12 mm.
- Delete the error memory.
- If the distance is more than 7 12 mm repeat the complete installation with a thicker feeler gauge (4.2 mm, 5.0 mm)